

Instructions: Toy Hauler Screen

Magnetic Attachment Version

For use with toy haulers with a steel rear door frame

⚠ WARNING

Use two people to install your Toy Hauler Screen. When using a ladder always take great care, especially if using a ladder on the slanted door/ramp to your Toy hauler.

⚠ CAUTION

For proper installation, we recommend that you install the rip-and-grip tape strips to your toy hauler. Make sure that these DO NOT interfere with the opening or closing mechanism of the rear door of your toy hauler.

Caution

Be sure to read the instructions BEFORE installing your Toy Hauler Screen. Depending on your type of toy hauler, the screen may be installed on the outside or inside of the rear door frame. You may prefer the look of your screen when installed on the outside but installation on the outside of the frame will require removal of the screen when closing your toy hauler door. Not all toy hauler designs allow installation to the inside of the frame.

Caution

High winds could cause the screen to detach.

Caution

It is best to let any installed rip-and-grip adhesive tape cure for 24 hours before use.

Materials needed:

- Ladder

Installation


Magnetic Version:

(For use with toy haulers with a steel rear door frame.)

1. Measure the opening of the door to find the center point and mark it in a nonpermanent way (tape, soft pencil, etc.).
2. Place a piece of rip-and-grip tape (included) on each of the top corners and the top center of the door frame.
3. Peel the adhesive backing paper off the center rip-and-grip tape tab and adhere it to the metal frame on the centerline you marked in step 1.
4. Your screen is designed to fit a variety of door widths by using

adjustable tabs at the top corners to shorten the width of the screen. To adjust the width, use the tab to fold the top edge of the screen over and attach it to the rip-and-grip strip. Do the same on the other side.


5. Working first on one side and then the other, adhere the magnetic strips on the edges of the screen to the

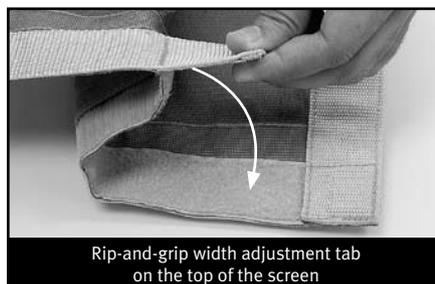

sides of the door opening.

6. Your screen is also designed to fit two different door heights. To size your screen to your door, find the rip-and-grip adjustment strip sewn in near the bottom of the screen. If your screen is too long for your door opening, attach the rip-and-grip strip on the bottom of the screen to the strip sewn in just above it.

7. There are magnets sewn in to pockets at the bottom of your screen. These will adhere to the bottom of the

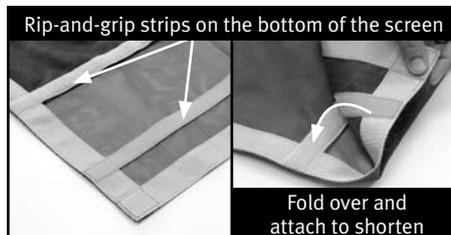

door frame, keeping the screen closed.

Use and Storage

Your screen is equipped with privacy panels that can be taken off if desired. To remove, simply separate the rip-



and-grip strips on the top and bottom of the panels.

To avoid mildew do not store a wet screen or privacy panels in an confined area.

Care

Spot clean with water, a mild soap and a sponge. Don't use abrasive cleaners or brushes, especially on the privacy panels.

Warranty

If this product fails due to a defects in workmanship and materials within two years from the date of purchase Classic Accessories will repair or replace it free of charge. This warranty does not cover damage caused by improper use or installation of this product.



CLASSIC[™]
ACCESSORIES

We Cover Your Gear®

Classic Accessories, Inc.
Kent, WA, USA 98032
www.classicaccessories.com

Instructions: Toy Hauler Screen

Rip-And-Grip Attachment Version

For use with toy haulers with a non-steel rear door frame

⚠ WARNING

Use two people to install your Toy Hauler Screen. When using a ladder always take great care, especially if using a ladder on the slanted door/ramp to your toy hauler.

⚠ CAUTION

For proper installation, it is necessary to install rip-and-grip tape strips to your toy hauler. Make sure that these DO NOT interfere with the opening or closing mechanism of the rear door on your toy hauler.

Caution

Be sure to read the instructions BEFORE installing your Toy Hauler Screen. Depending on your type of toy hauler, the screen may be either installed on the outside or inside of the rear door frame. You may prefer the look of your screen when installed on the outside but installation on the outside of the frame will require removal of the screen when closing your toy hauler door. Not all toy hauler designs allow installation to the inside of the frame.

Caution

High winds could cause the screen to detach.

Caution

It is best to let any installed rip-and-grip adhesive tape cure for 24 hours before use.

Materials needed:

- Ladder
- Scissors

Installation

Rip-And-Grip Version:

(For use with toy haulers with a non-steel rear door frame.)


1. Measure the opening of the door to find the center point and mark it in a nonpermanent way (tape, soft pencil, etc.).
2. Included with your screen are three rolls of loop rip-and-grip adhesive backed tape. Two rolls are 1" in width and the other is 1.5" in width. The 1" width tape is used for the sides of your screen. The 1.5" width tape is for the top of your screen.
3. Measure and note the width of your door opening at the frame. Using the 1.5" hoop rip-and-grip tape, measure out

and cut a piece the same size and adhere it, rubbing firmly, to the top frame of your door opening. Be careful that it is straight and without wrinkles.

4. Starting from the center of the door frame (marked in step 1) attach the top hook rip-and-grip section of the screen to the corresponding loop rip-and-grip tape you applied to the top of the frame.

5. Your screen is designed to fit a variety of door widths by using adjustable tabs at the top corners to shorten the width of the screen. To adjust the width, use the tab to fold the top edge of the screen over and attach it to the rip-and-grip strip. Do the same on the other side.


6. Next, measure the height of the side frames of your door. Measure and cut sections of the 1" loop rip-and-grip tape.

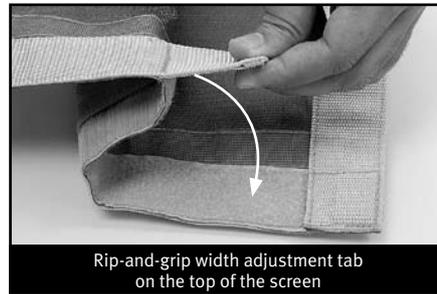

Adhere to the side frames of your door by peeling off the adhesive backing paper and pressing firmly, making sure they are straight and free of wrinkles. Avoid putting any rip-and-grip tape over any closing mechanisms or hinges.

7. Working on either side, attach the hook rip-and-grip sections on your screen to the loop rip-and-grip tape sections, pressing firmly.

8. Your screen is also designed to fit two different door heights. To size your screen to your door, find the rip-and-grip adjustment strip sewn in near the bottom of the screen. If your screen is too long for your door opening, attach the rip-and-grip strip on the bottom of the screen to the strip sewn in just above it.

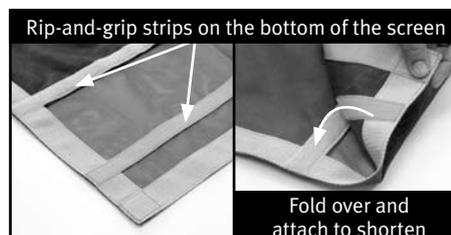

9. There are magnets sewn in to pockets at the bottom of your screen. These will adhere to the bottom of the door frame, (if it is steel) keeping the screen closed.

Use and Storage

Your screen is equipped with privacy panels that can be taken off if desired. To remove, simply separate the rip-and-grip strips on the top and bottom of the panels.

To avoid mildew do not store a wet screen or privacy panels in an confined area.

Care

Spot clean with water, a mild soap and a sponge. Don't use abrasive cleaners or brushes, especially on the privacy panels.

Warranty

If this product fails due to a defects in workmanship and materials within two years from the date of purchase Classic Accessories will repair or replace it free of charge. This warranty does not cover damage caused by improper use or installation of this product.



CLASSIC[™]
ACCESSORIES

We Cover Your Gear[®]

Classic Accessories, Inc.
Kent, WA, USA 98032
www.classicaccessories.com